


Thermal Conductivity Measurement

Application Note for Liquid Flow Sensors

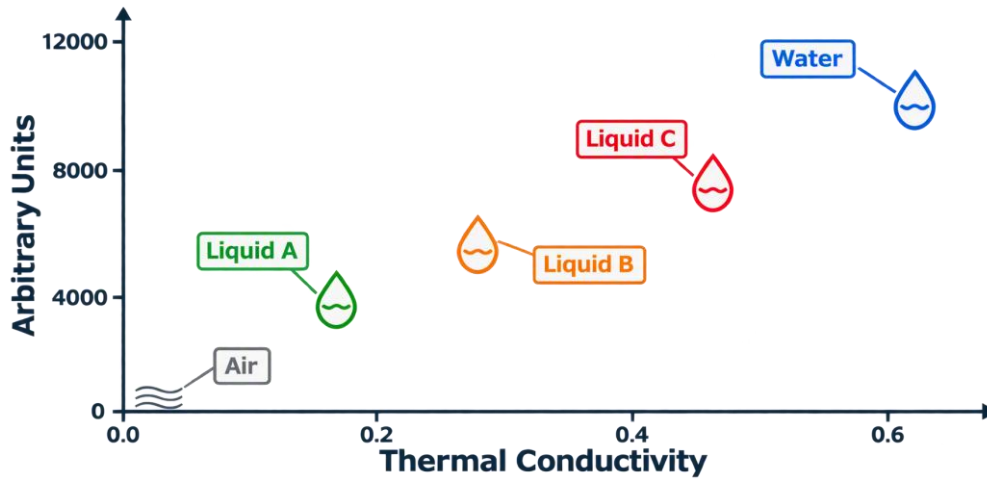

This application note describes how to use the SLF3x liquid flow sensors to measure the thermal conductivity of the liquid inside the flow channel. This measurement can for example be used to qualitatively identify which medium (out of a selection) is present inside the sensor or to quantitatively determine the concentration of a binary mixture of liquids.

Contents

1. Introduction	2
2. Quick evaluation	4
3. Measurement Sequence	4
4. Output Interpretation	5
5. Digital Interface Description.....	7

1. Introduction

The Sensirion liquid flow sensors of the SLF family can be operated in a special mode to measure the thermal conductivity of the liquid inside the sensor. Table 1 summarizes which SLF sensor variants include this feature.

Sensor variant	Thermal Conductivity Measurement
SLF3S-0600F	Yes, from SN 2639-xxxxxx onwards
SLF3S-1300F	Yes, from SN 2639-xxxxxx onwards
SLF3S-4000B	No
SLF3S-0600D	Yes
SLF3S-1300D	Yes

Table 1. Overview of which SLF sensor variants include the Thermal Conductivity Measurement feature.

1.1 Thermal Conductivity Measurement Principle

At zero flow, the thermal conductivity of the medium determines the heat transport away from the sensor's microheater. A higher thermal conductivity leads to a stronger cooling and hence to a lower heater temperature. This is illustrated in Figure 1 below.

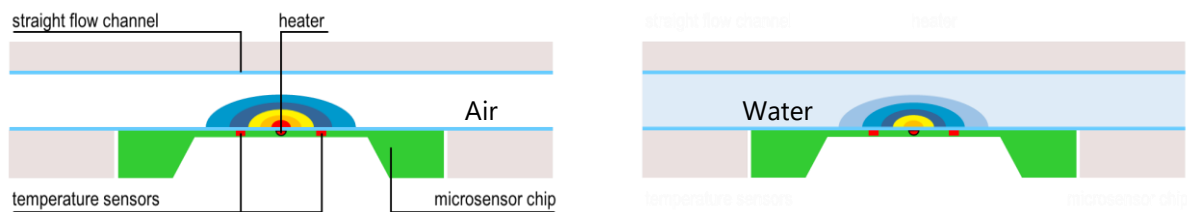


Figure 1. Thermal conductivity measurement at zero flow. Air has a low thermal conductivity, leading to a higher heater temperature (left), while water higher thermal conductivity leads to a lower heater temperature (right).

The SLF3S sensors provide the result of the thermal conductivity measurement in arbitrary units, which are scaled such that the output for air is 100 and the output for water is 10'000. These arbitrary units can be used as an approximate measure for the thermal conductivity of the medium. For reference, the thermal conductivity of some common liquids as well as air are listed in Table 2 below.

Medium	Thermal conductivity (W/m K)	Sensor output (arbitrary units)
Water	0.607	10'000
Glycerol	0.292	
Ethanol	0.169	
Isopropyl alcohol	0.135	
Diesel fuel	0.13	
Air	0.026	100

Table 2. Thermal conductivity of selected media (all at 25°C, 1 bar abs.)

The following use cases describe two possible applications of the thermal conductivity measurement.

1.2 Use Case 1: Media Recognition

Complex fluidic systems increase the risks for errors during service intervals and thus even highly trained technical personnel can potentially mix up connections between fluidic lines or replenish reagent reservoirs in the wrong order. A thermal conductivity measurement in the fluid line allows the instrument to check that the correct liquid has been connected to the respective line and to raise an alarm if a liquid with unexpected thermal conductivity is detected.

1.3 Use Case 2: Concentration Measurement

Many liquids are binary mixtures of two main components. Examples include:

- Milk (milk fat in water)
- Engine coolant (antifreeze in water)
- Diesel exhaust fluid (urea in water)

The concentration of a test liquid can be determined if the thermal conductivity (in arbitrary units) is measured and the calibration curve from arbitrary units to concentration is known. For a given combination of two constituents, the calibration curve can readily be obtained by measuring the sensor output (in arbitrary units) for a handful of samples with known concentrations of the mixture.

1.4 Temperature Compensation

The thermal conductivity of every liquid changes with its temperature. If the measurement is not always done at the same temperature, this effect needs to be considered. As the temperature dependency of every liquid is different (see Figure 2), it is not possible to offer a universal temperature compensation. This must be done by the customer by using the temperature output of the sensor.

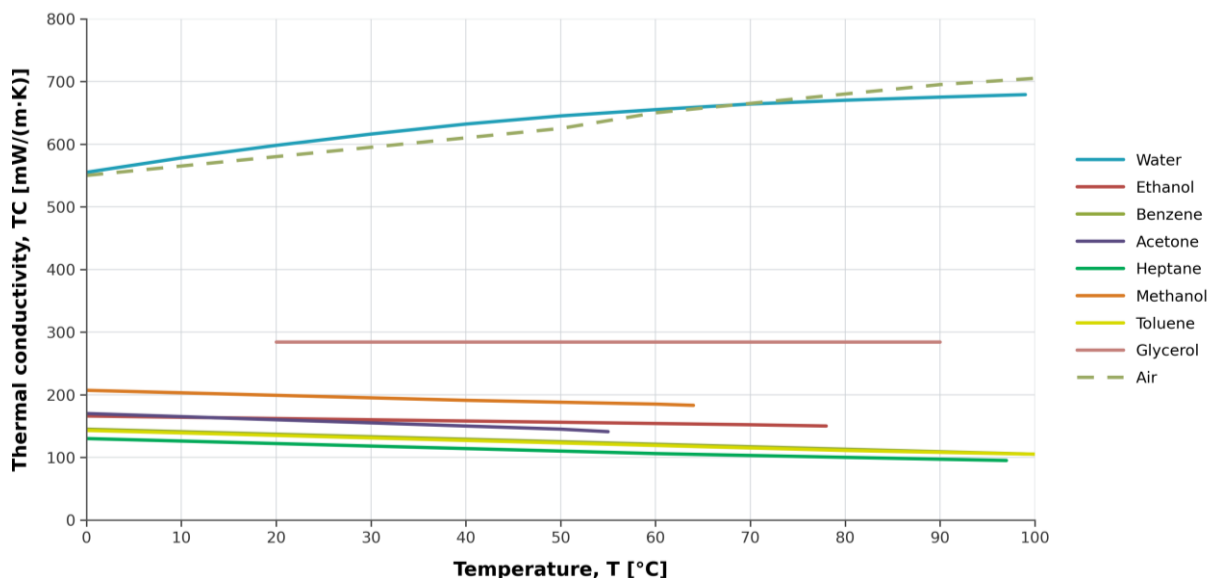


Figure 2. Behavior of thermal conductivity with respect to the temperature of different liquids.

For example, a correction factor that is a good starting point for oil in water mixtures (single digit percentage of oil in water) is:

$$TC_{compensated} = \frac{TC_{raw}}{1 + 1.35 \cdot 10^{-3} \cdot (T - 25^{\circ}\text{C})}$$

2 Quick evaluation

For a first evaluation the Sensirion software "Control Center" can be used. The necessary steps are:

1. Download and install the software [ControlCenter | Sensirion](#).
2. Connect the sensor to the computer by using the "Adapter cable Molex with M8" (Article number: 1.000.069) and the "SCC1-USB 2m Sensor Cable" (Article number: 1-101007-01).
3. The feature can be accessed by clicking on the gear wheel icon beside the sensor name

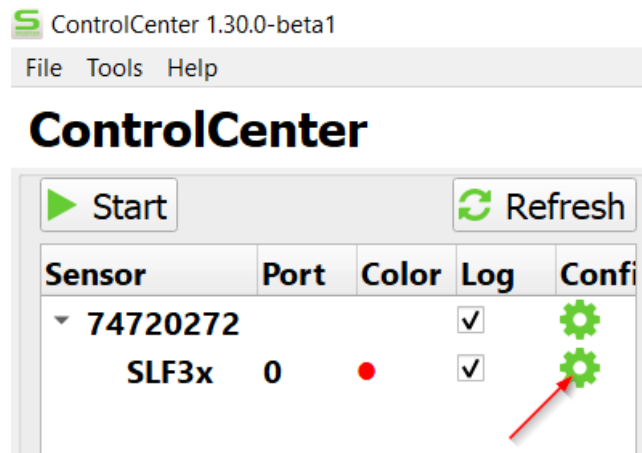


Figure 3. Screenshot from Control Center version 1.30

3 Measurement Sequence

For a precise thermal conductivity measurement, the following recipe should be followed:

Priming

1. Completely fill the sensor with the liquid to be measured
 - ⇒ If several different liquids shall be measured one after each other, flush thoroughly with the new liquid to avoid carry-over of the previous liquids to consecutive measurements.
2. Completely halt the flow (stop the pump, close the valve)

Zero-flow confirmation

For a precise thermal conductivity measurement, it is necessary that the medium is standing still inside the sensor. This can be verified by measuring the flow rate and confirming that there is no flow. As is pointed out in the SLF3x sensor datasheets, after starting the measurement it takes a short time before the flow measurement reaches the best accuracy. Therefore, the first measurement should be discarded.

3. Start the flow measurement (start continuous measurement, I²C command 0x3608; see the SLF3x sensor datasheets for details)
4. Wait 100 milliseconds
5. Read out the first flow measurement and discard it (send I²C read header; see the SLF3x sensor datasheets for details)
6. Wait 100 milliseconds.

7. Read out the flow measurement again (send I²C read header; see the SLF3x sensor datasheets for details.)
 - ⇒ Only proceed if the flow rate is zero (within the experimental uncertainty, see the SLF3x sensor datasheets for details on the sensors' offset). Otherwise, repeat steps 6 and 7 to continue reading the flow rate every 100 milliseconds until the flow has come to a full stop.
8. Stop the flow measurement (stop continuous measurement, I²C command 0x3FF9; see the SLF3x sensor datasheets for details.)
9. Wait 0.5 milliseconds for the flow measurement to terminate.

Thermal conductivity measurement

The thermal conductivity measurement itself is triggered by a single command, after which the result can be read out exactly once. If another thermal conductivity measurement shall be performed, the concentration measurement command needs to be sent again.

10. Trigger the concentration measurement (I²C command 0x3646; see section 4 below)
11. Wait 2.3 seconds for the measurement to complete
12. Read out the thermal conductivity measurement result as well as the temperature and the delta-temperature signals (send I²C read header; see section 4 below)
 - ⇒ Check that the delta-temperature signal (see section 4.3 below) is low (below ± 0.02 °C). If there is a larger delta-temperature, this is a sign that the liquid temperature and the sensor temperature have not yet reached the equilibrium. In this case, repeat the concentration measurement from step 10. Otherwise use the measurement result depending on the application, for example as described in the next section.

4 Output Interpretation

4.1 Media Recognition

The thermal conductivity measurement may be used to distinguish and identify different liquids, provided that they have different thermal conductivity values.

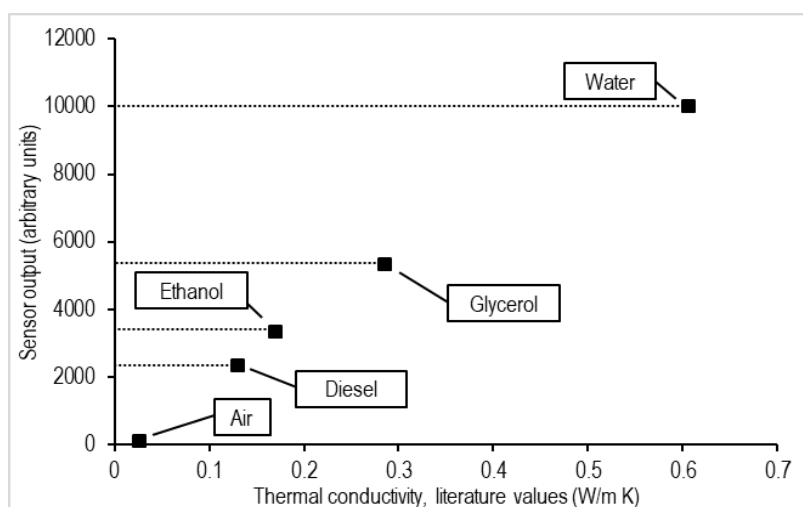


Figure 4. Thermal conductivity for selected fluids. Sensor output is in arbitrary units, while the literature values are in W/m K.

As can be seen from Figure 4 above, different liquids such as e.g. Ethanol, Glycerol or Water can clearly be qualitatively distinguished – and hence identified – based on the sensor’s thermal conductivity measurement.

4.2 Concentration Measurement

In binary mixtures of two constituents with different thermal conductivity, the concentration of the two components can be quantitatively determined by measuring the thermal conductivity of the mixture.

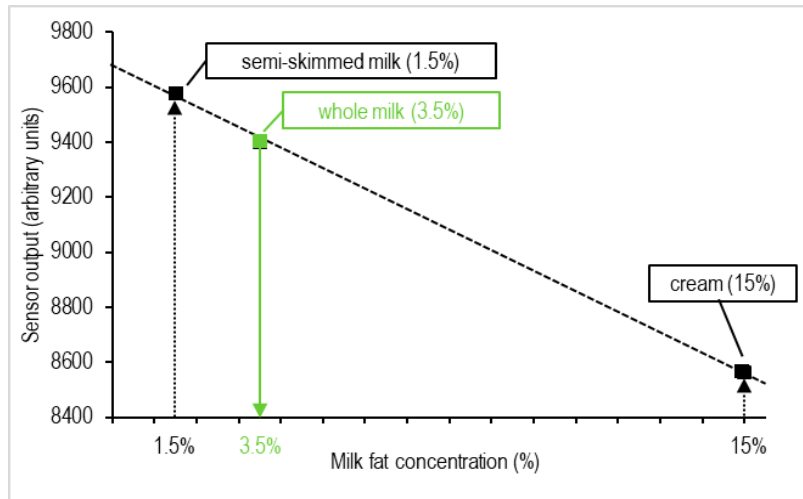


Figure 5. Sensor output vs. milk fat concentration. The dashed black line determined by measuring two anchor points (1.5% semi-skimmed milk and 15% cream, black squares) can be used to determine the fat concentration of other types of milk, e.g. 3.5% whole milk (green square).

For such a quantitative measurement, first the calibration curve for the mixture needs to be determined. In the present example, two corner points are used to establish the calibration curve (dashed line): 1.5% semi-skimmed milk and 15% cream (black squares). Using this calibration curve, the concentration of milk with an intermediate fat concentration can be determined. In this example, we measure 3.5% whole milk and effectively obtain a 3.5% fat concentration (green square).


5 Digital Interface Description

The sensor's digital interface is compatible with the I²C protocol. This chapter describes the extended command set which is needed to run the thermal conductivity measurement. For general information on the SLF3x liquid flow sensors and basic commands, please check see the sensors' datasheets.

5.1 I²C Sequence

The commands are 16 bits long. Data is read from the sensor in multiples of 16-bit words, each followed by an 8-bit checksum to ensure communication reliability.

I²C master sends the write header and writes a 16 bit command



I²C master sends the read header and receives multiple 16bit words with CRC byte.

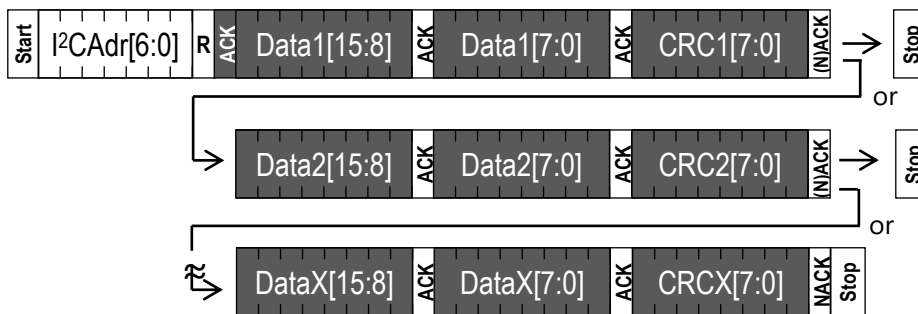


Figure 6. Schematics of I²C communication with SLF3x sensor. Dark areas with white text indicate that the sensor controls the SDA (Data) line. The I²C read sequences can be aborted with a NACK and STOP condition.

5.2 I²C Command

The thermal conductivity measurement itself is triggered by a single, specific I²C command. The remaining commands needed for the entire measurement sequence are described in the sensors' datasheets.

5.3 Perform Thermal Conductivity Measurement

The sensor measures the thermal conductivity, the sensor temperature and the delta-temperature (a measure for the temperature difference between the liquid and the sensor). All three signals can be read simultaneously.

Command	Command code (Hex)	Description
Trigger single thermal conductivity measurement	0x3646	This command starts the thermal conductivity measurement. The measurement takes approx. 2.3 seconds. After completion, the heater is switched off and the sensor enters idle mode.

Table 3. I²C command to perform the thermal conductivity measurement

After the command has been sent, the sensor performs one thermal conductivity measurement. The measurement takes approximately 2.3 seconds. When the measurement finishes, the sensor's heater is automatically switched off, the sensor enters idle mode, and the result can be read out anytime by sending a single I²C read header.

If the result is requested while no measurement data is available yet, the sensor will respond with a NACK to the I²C read header (I²C address + read bit).

Preceding command	Consecutive read	Description
Trigger single thermal conductivity measurement	Byte1: Thermal Conductivity 8msb Byte2: Thermal Conductivity 8lsb Byte3: CRC Byte4: Temperature 8msb Byte5: Temperature 8lsb Byte6: CRC Byte7: Delta-Temperature 8msb Byte8: Delta-Temperature 8lsb Byte9: CRC	After the thermal conductivity measurement is finished, the measurement results can be read out. The temperature and the delta temperature signals don't need to be read out (every time). The read sequence can be aborted by a NACK and a STOP condition.

Table 4. Read out of thermal conductivity measurement and auxiliary data

5.4 Conversion to Physical Values

The sensor output is converted to physical values using the following scale factors.

Parameter	SLF3x
Thermal conductivity	1 (arbitrary units)
Temperature	200 (°C) ⁻¹
Delta-temperature	1000 (°C) ⁻¹

Table 5. Scale factors

5.5 Thermal Conductivity

The thermal conductivity signal read from the sensor is a 16-bit signed integer number (two's complement number ranging from -32768 ... 32767). The value is provided in arbitrary units such that the signal is 100 for air and 10'000 for water. Use this signal to identify the medium which is inside the sensor or to determine the concentration of a binary mixture.

5.6 Temperature

The digital calibrated temperature signal read from the sensor is a 16-bit signed integer number (two's complement number ranging from -32768 ... 32767). The integer value can be converted to the physical value by dividing it by the scale factor (temperature in °C = sensor output ÷ scale factor).

5.7 Delta-Temperature

The difference temperature between the sensor chip and the liquid inside the sensor is read from the sensor as a 16-bit signed integer number (two's complement number ranging from -32768 ... 32767). The integer value can be converted to the physical value by dividing it by the scale factor (delta-temperature in °C = sensor output · scale factor).

Important Notices

Warning, Personal Injury

Do not use this product as safety or emergency stop devices or in any other application where failure of the product could result in personal injury (including death). Do not use this product for applications other than its intended and authorized use. Before installing, handling, using or servicing this product, please consult the data sheet and application notes. Failure to comply with these instructions could result in death or serious injury.

If the Buyer purchases or uses SENSIRION products for any unintended or unauthorized application, Buyer shall defend, indemnify and hold harmless SENSIRION and its officers, employees, subsidiaries, affiliates and distributors against all claims, costs, damages and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if SENSIRION is allegedly negligent with respect to the design or the manufacture of the product.

ESD Precautions

The inherent design of this component causes it to be sensitive to electrostatic discharge (ESD). To prevent ESD-induced damage and/or degradation, take customary and statutory ESD precautions when handling this product. See application note "ESD, Latchup and EMC" for more information.

Warranty

SENSIRION solely warrants to the original purchaser of this product for a period of 12 months (one year) from the date of delivery that this product is of the quality, material and workmanship defined in SENSIRION's published specifications of the product. Within such period, if proven to be defective, SENSIRION shall as sole and exclusive remedy, in SENSIRION's discretion, repair this product or send a replacement product, free of charge to the Buyer, provided that:

- notice in writing describing the defects shall be given to SENSIRION within fourteen (14) days after their appearance;
- such defects shall be found, to SENSIRION's reasonable satisfaction, to have arisen from SENSIRION's faulty material or workmanship;
- the defective product shall be returned to SENSIRION's factory at the Buyer's expense; and
- the warranty period for any repaired or replaced product shall be limited to the unexpired portion of the original period.

The Buyer shall at its own expense arrange for any dismantling and reassembly that is necessary to repair or replace the defective product. This warranty does not apply to any product which has not been installed or used within the specifications recommended by SENSIRION. EXCEPT FOR THE WARRANTIES EXPRESSLY SET FORTH HEREIN, SENSIRION MAKES NO WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCT. ANY AND ALL WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED AND DECLINED.

SENSIRION is only liable for defects of this product arising under the conditions of operation provided for in the data sheet and proper use of the goods. SENSIRION explicitly disclaims all warranties, express or implied, if the goods are operated or stored not in accordance with the technical specifications.

SENSIRION does not assume any liability arising out of any application or use of any product or circuit and specifically disclaims any and all liability, including without limitation indirect, consequential, and incidental damages, and loss of profit. No obligation or liability shall arise or grow out of SENSIRION's rendering of technical advice, consulting, or implementation instructions or guidelines. All operating parameters, including without limitation recommended parameters, must be validated for each Buyer's applications by Buyer's technical experts. Recommended parameters can and do vary in different applications.

SENSIRION reserves the right, without further notice, (i) to change the product specifications and/or the information in this document and (ii) to improve reliability, functions and design of this product.

Headquarters and Subsidiaries

Sensirion AG

Laubisruetistr. 50
CH-8712 Staefa ZH
Switzerland
phone: +41 44 306 40 00
fax: +41 44 306 40 30
info@sensirion.com
www.sensirion.com

Sensirion Inc., USA

phone: +1 312 690 5858
info-us@sensirion.com
www.sensirion.com

Sensirion Korea Co. Ltd.

phone: +82 31 337 7700~3
info-kr@sensirion.com
www.sensirion.com/kr

Sensirion Japan Co. Ltd.

phone: +81 45 270 4506
info-jp@sensirion.com
www.sensirion.com/jp

Sensirion China Co. Ltd.

phone: +86 755 8252 1501
info-cn@sensirion.com
www.sensirion.com/cn

Sensirion Taiwan Co. Ltd

phone: +886 2 2218-6779
info@sensirion.com
www.sensirion.com

To find your local representative, please visit
www.sensirion.com/distributors